

|   |   |   |   |
|---|---|---|---|
| G | . | . | . |
| F | . | . | . |
| E | . | . | . |
| C | . | . | . |
| B | . | . | . |
| A | . | . | . |

|         |              |     |       |
|---------|--------------|-----|-------|
| REV:    | DESCRIPTION: | BY: | DATE: |
| DEALER: |              |     |       |

PROJECT:

SKU: RPWM-LOCK-S


PART NO:

DESCRIPTION: RPWM-LOCK-S INSTRUCTIONS


|         |                  |           |              |
|---------|------------------|-----------|--------------|
| SIZE: B | DATE: 11/21/2024 | DRAWN: SA | CHECKED: XXX |
|---------|------------------|-----------|--------------|

DWG. ID: LOCK KIT SLIM INSTRUCTION.1


|         |                             |             |
|---------|-----------------------------|-------------|
| JOB NO: | SCALE: 1:8<br>SHEET: 1 OF 1 | REVISION: A |
|---------|-----------------------------|-------------|

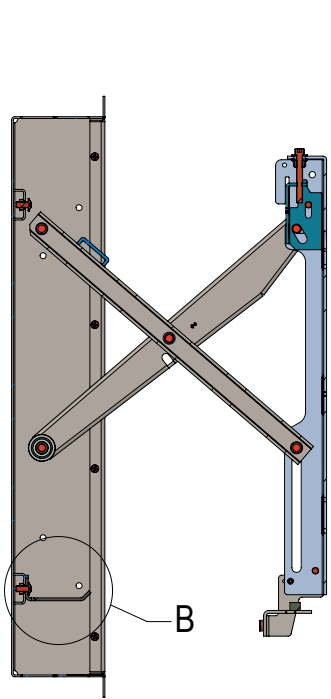


SECTION A-A

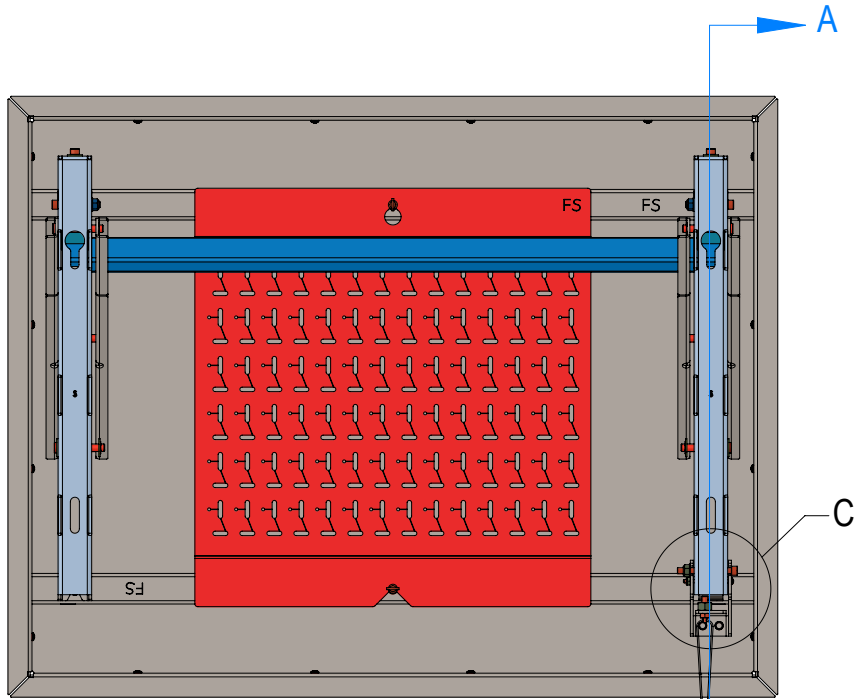

FRONT VIEW  
WITH X-ARM OPEN

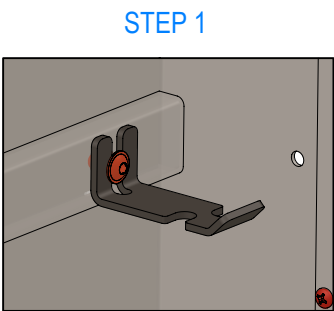


STEP 1

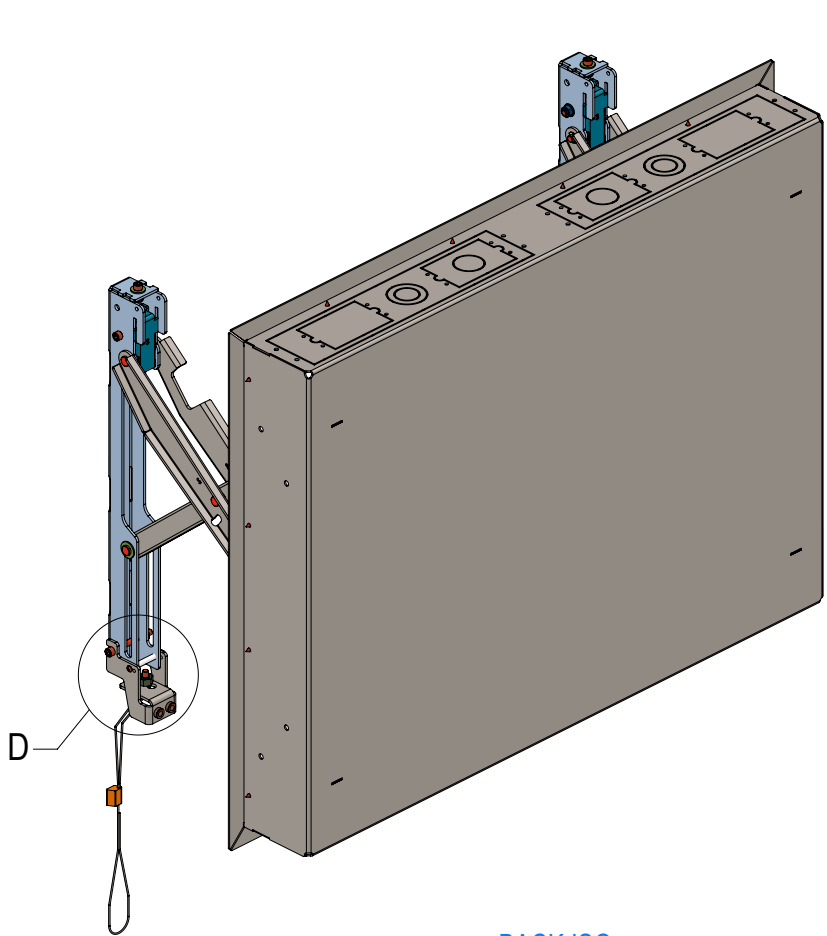


BACK ISO  
VIEW

PULL CORD  
TO UNLOCK  
X-ARM

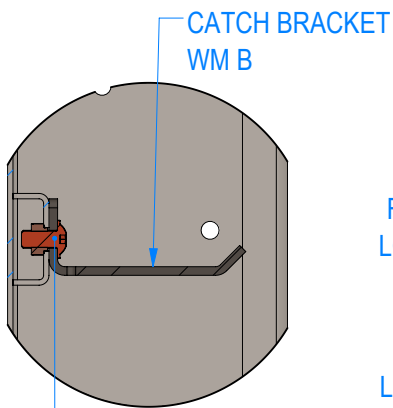


USE EXISTING HARDWARE  
1/4-20 X 3/4"  
FLANGED SOCKET CAP  
HEAD SCREW

DETAIL B  
SCALE 3 : 8

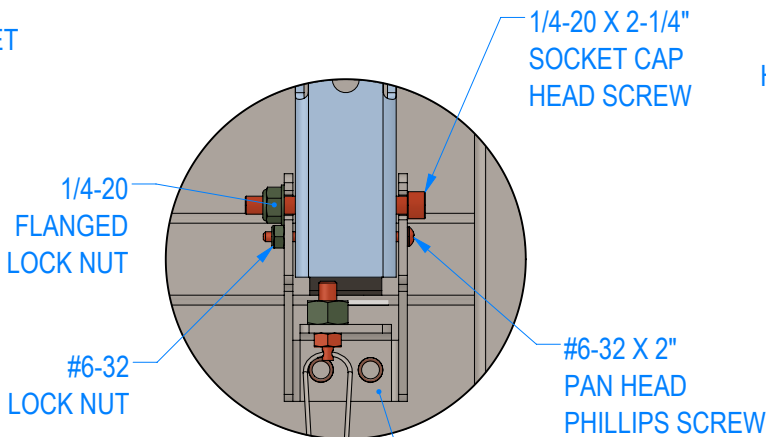

DETAIL C  
SCALE 3 : 8

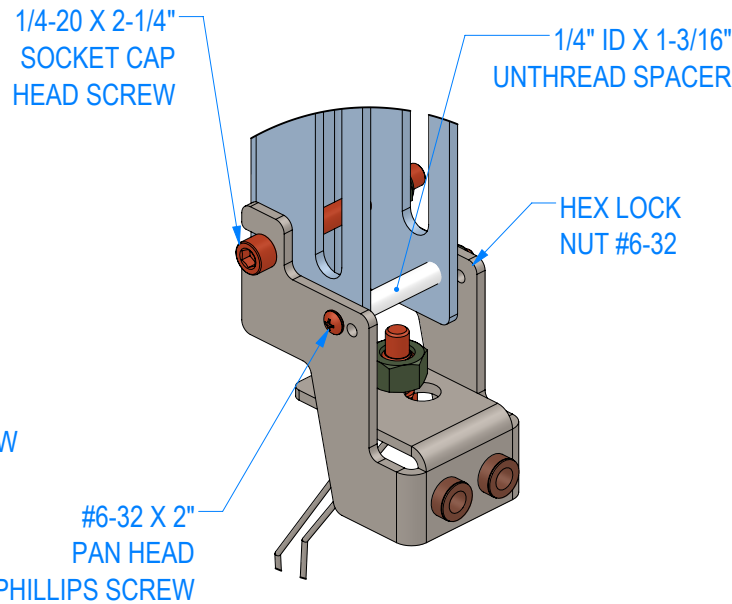

DETAIL D  
SCALE 1 : 2

INSTALLATION INSTRUCTIONS:

- USE EXISTING 1/4-20 X 3/4" SCREW TO ATTACH CATCH BRACKET TO THE BOTTOM RIGHT SIDE OF THE X-ARM AS SHOWN IN DETAIL B & C.
- USE THE SUPPLIED 1/4-20 X 2-1/4" SOCKET CAP SCREW TO ATTACH THE LOCK BRACKET TO THE BOTTOM OF ARM IN LOCATION AS SHOW IN DETAIL C & D.
- ROTATE THE LOCK BRACKET UNIT HOLES FOR #6-32 X 2" SCREW IN-LINE WITH THE X-ARM. SLIDE THE SUPPLIED #6-32 X 2" THRU THE FIRST WALL. SLIP IN THE UNTHREAD SPACER IN BETWEEN THE WALLS AND TIGHTEN THE #6-32 LOCKNUT SNUG ON THE OUTSIDE WALL.
- TO OPEN THE X-ARM, PULL THE CORD TO UNLOCK THE X-ARM.