


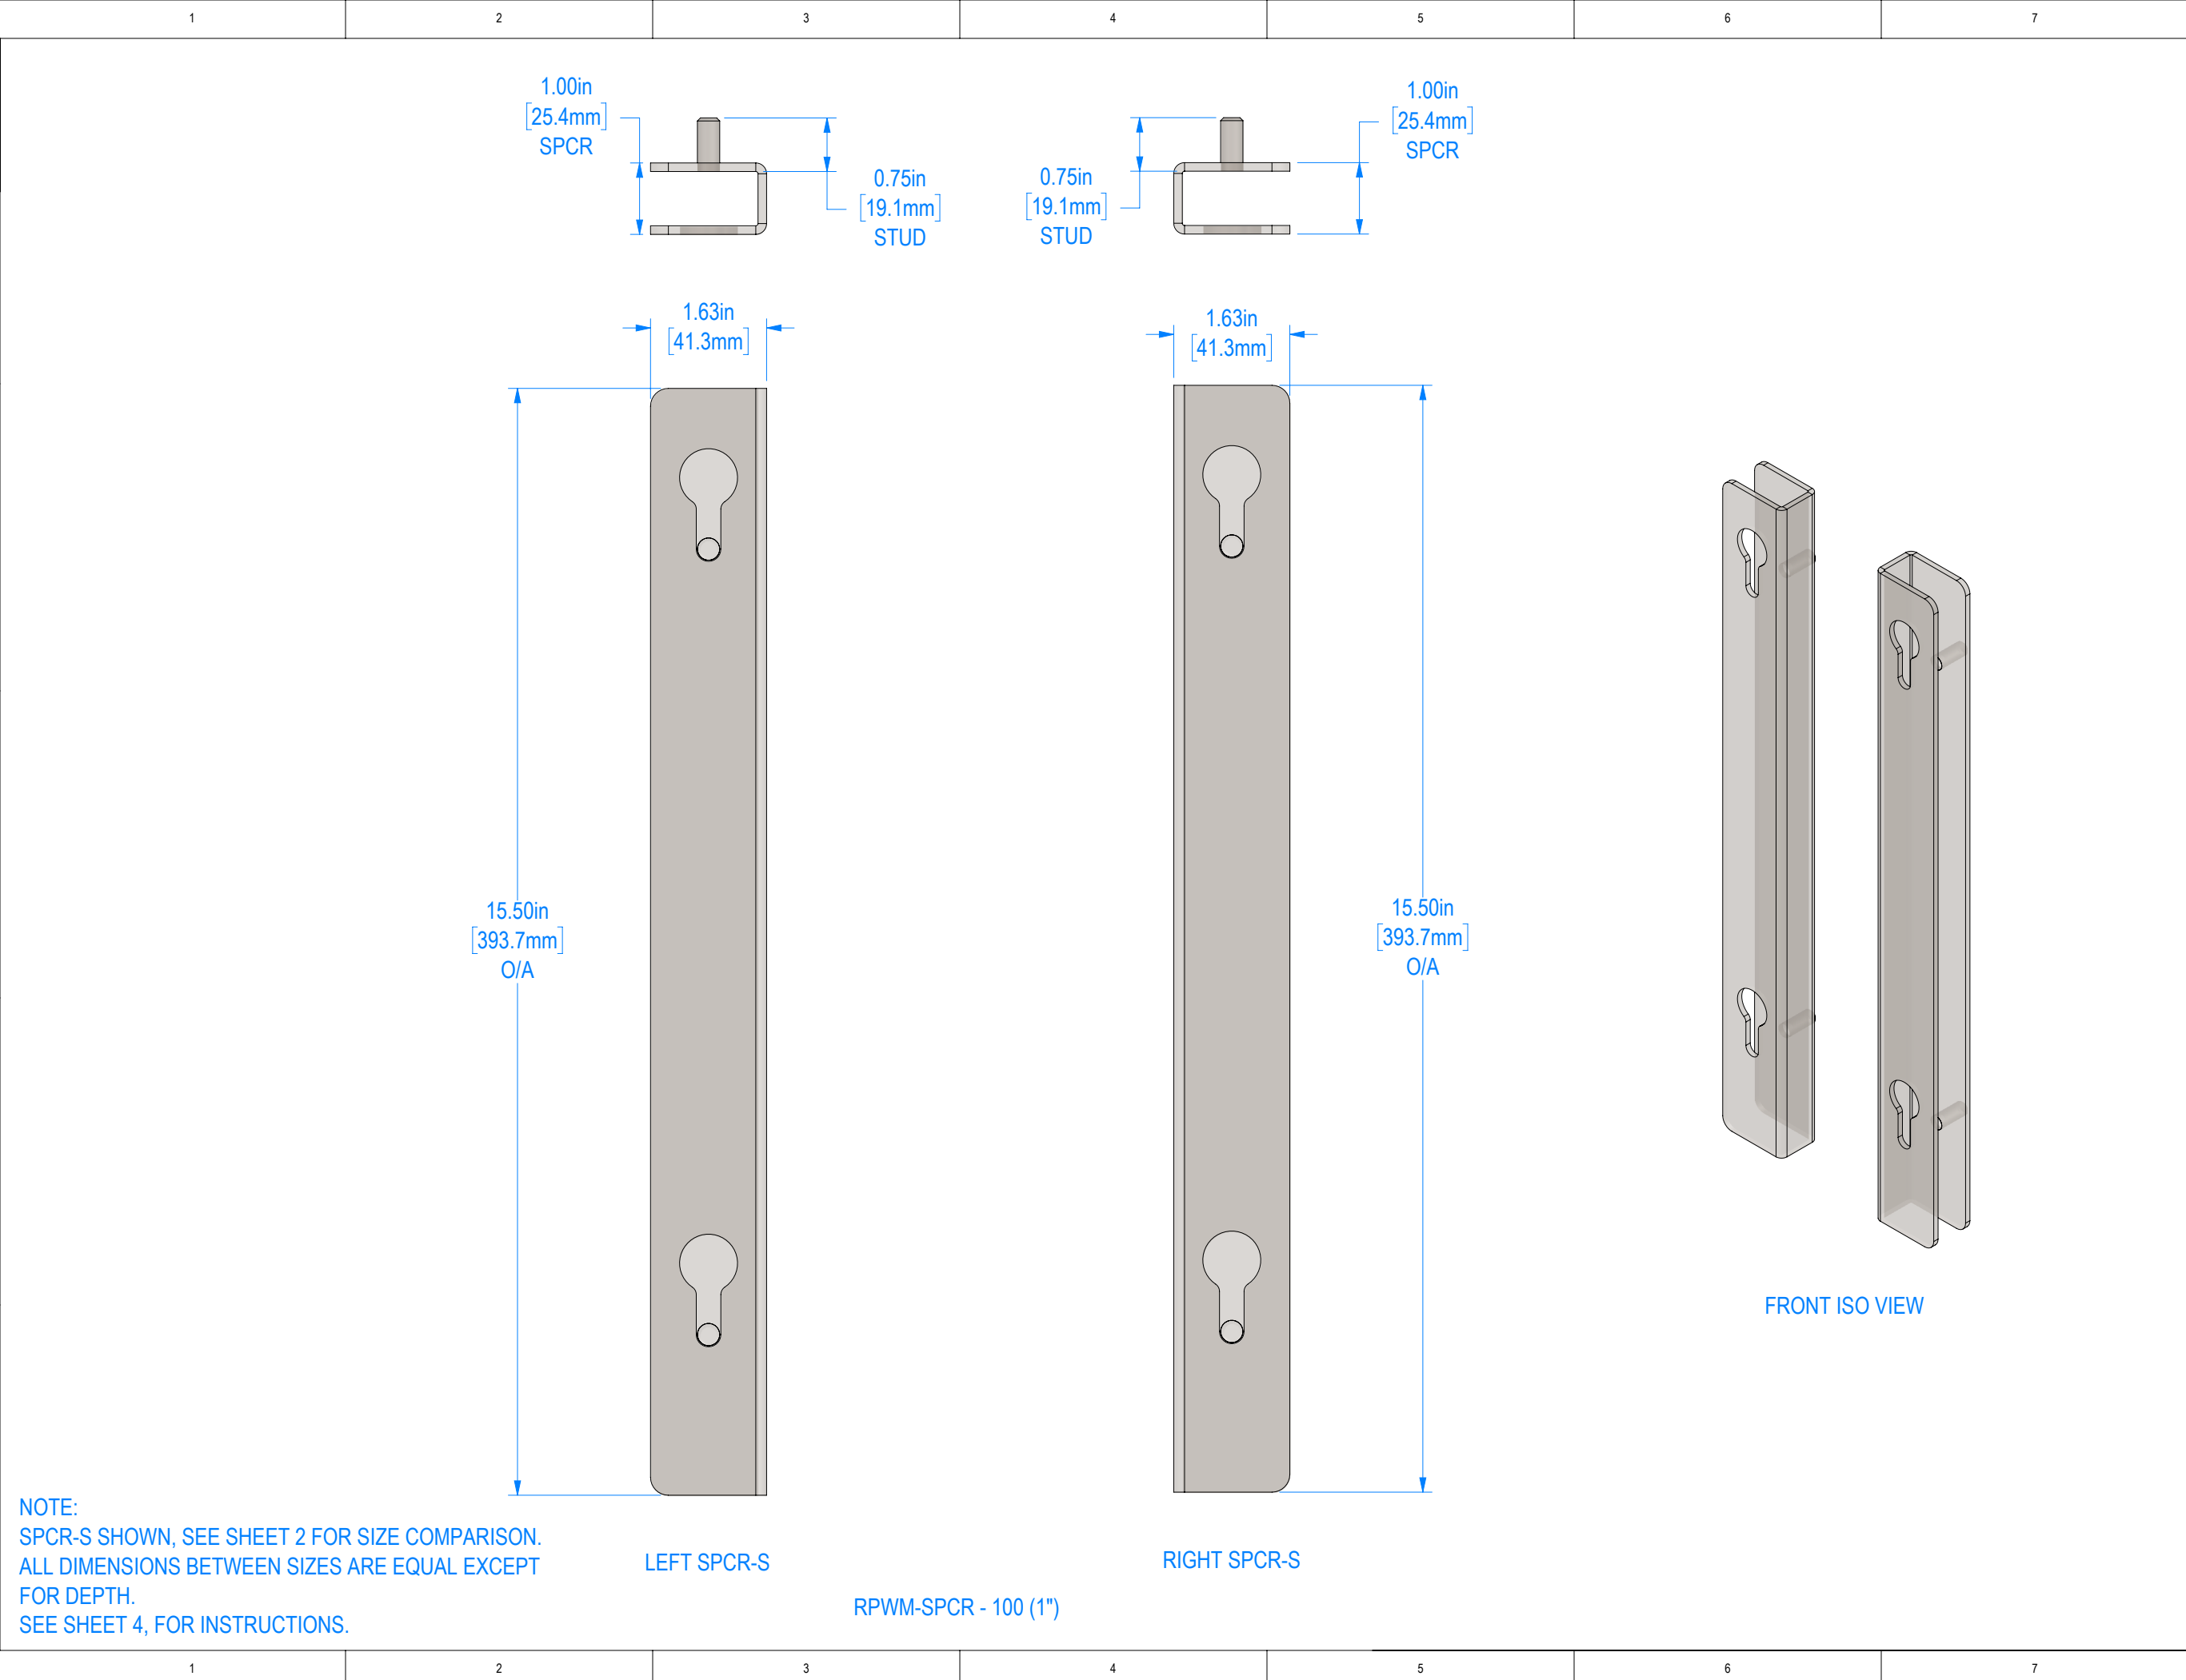

1275 S Lewis St, Anaheim, CA 92805
P: 714-991-6400 | C: 714-390-8572
www.rpvisuals.com

This drawing contains proprietary information owned or controlled by RPVisual Solutions and must not be used or disclosed without prior written authorization

DIMENSIONS ARE IN INCHES
TOLERANCES ARE:

FRACTIONS	DECIMALS	ANGLES
X/X : ± 1/32	.XX : ± .03 .XXX : ± .010	X : ± .5 .XX : ± .20

APPROVED FOR FABRICATION

SIGNATURE:

DATE:

NOTES:

1. FINISH: SEMI-GLOSS BLACK POWDER COAT
2. APPROXIMATE WEIGHT: 2

G	.	.	.
F	.	.	.
E	.	.	.
C	.	.	.
B	.	.	.
A	.	.	.

REV: DESCRIPTION: BY: DATE:

DEALER:

PROJECT:

SKU: RPWM-SPCR-100

PART NO: 0039-060-01A


DESCRIPTION: WM SPACER 100 (LH & RH)

SIZE: B	DATE: 07/22/2025	DRAWN: SA	CHECKED: XX
---------	------------------	-----------	-------------


DWG. ID: RPWM-SPCR-100,200,300 SALE DWG.1

JOB NO:	SCALE: 1:1 SHEET: 1 OF 4	REVISION: 0
---------	-----------------------------	-------------


FRONT ISO VIEW

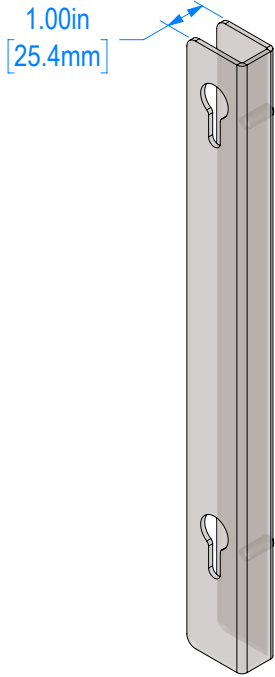

RPWM-SPCR - 100 (1")

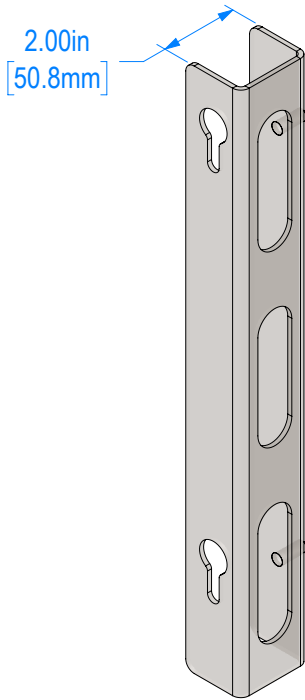


RPWM-SPCR - 200 (2")

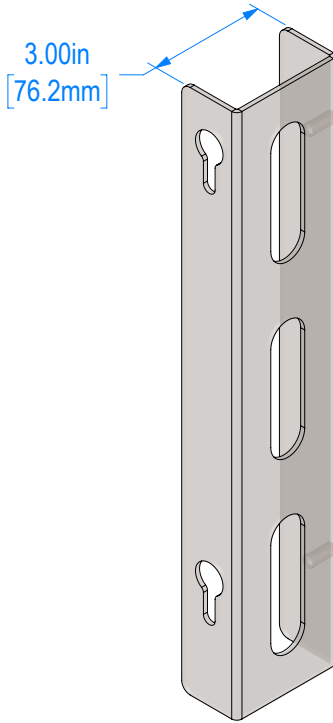


RPWM-SPCR - 300 (3")

NOTE:
LEFT HAND OF SPACERS ARE
SHOWN. SEE SHEET 1,3, AND 4
FOR RIGHT HAND UNIT.


SIDE VIEW

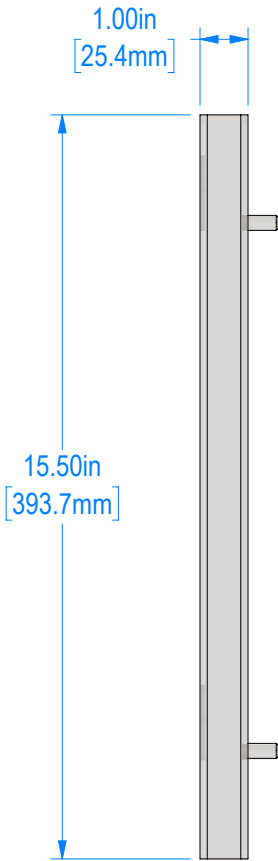

RPWM-SPCR - 100 (1")

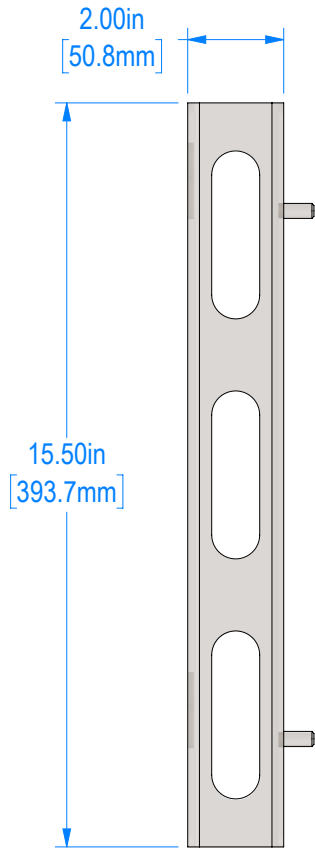

RPWM-SPCR - 200 (2")

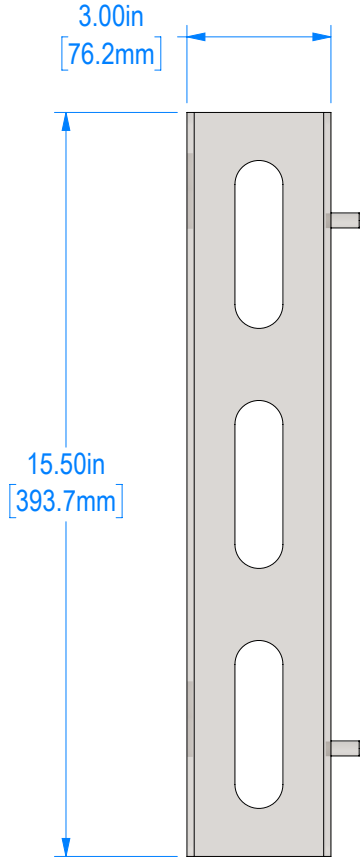

RPWM-SPCR - 300 (3")



1275 S Lewis St, Anaheim, CA 92805
P: 714-991-6400 | C: 714-390-8572
www.rpvisuals.com

This drawing contains proprietary information owned or controlled by RPVisual Solutions and must not be used or disclosed without prior written authorization

DIMENSIONS ARE IN INCHES		
TOLERANCES ARE:		
FRACTIONS	DECIMALS	ANGLES
X/X : ± 1/32	XX : ± .03 XXX : ± .010	X : ± .5 XX : ± .20

APPROVED FOR FABRICATION

SIGNATURE:

DATE:

- NOTES:
- 1. FINISH: SEMI-GLOSS BLACK POWDER COAT
 - 2. APPROXIMATE WEIGHT: 2

G	.	.	.
F	.	.	.
E	.	.	.
C	.	.	.
B	.	.	.
A	.	.	.

REV: DESCRIPTION: BY: DATE:

DEALER:

PROJECT:

SKU: RPWM-SPCR-100,200,300


PART NO: S 0039-060-01A M 0039-010-01A L 0039-030-01A

DESCRIPTION: Pair of spacers for Wallmate X-Arms, Small, Medium, Large

SIZE: B	DATE: 07/22/2025	DRAWN: SA	CHECKED: XX
---------	------------------	-----------	-------------


DWG. ID: RPWM-SPCR-100,200,300 SALE DWG.2

JOB NO: .	SCALE: 1:1	REVISION: 0
	SHEET: 2 OF 4	

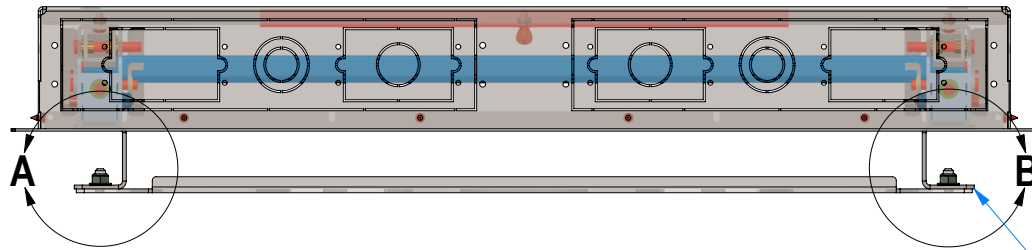


TOP VIEW WITH
RPWM-SPCR-M

GENERIC ADAPTER PLATE

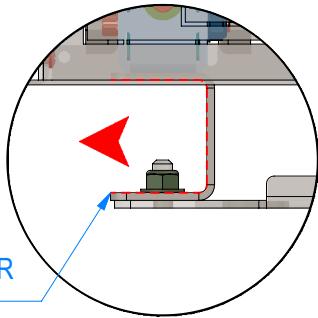


OPEN SIDE OF SPACER
FACESES OUTWARD

DETAIL A
SCALE 1 : 3
LEFT SPACER

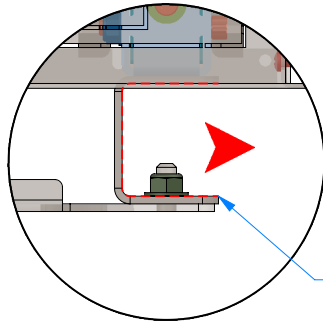


OPEN SIDE OF SPACER
FACESES OUTWARD

DETAIL B
SCALE 1 : 3
RIGHT SPACER

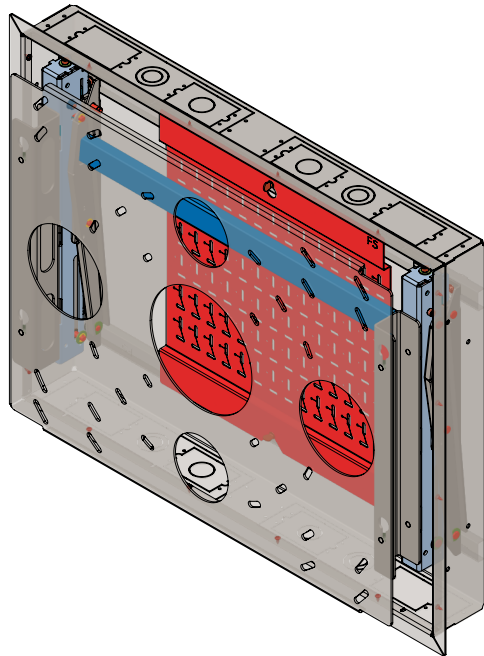


FRONT ISO VIEW
WITH SPCR-M

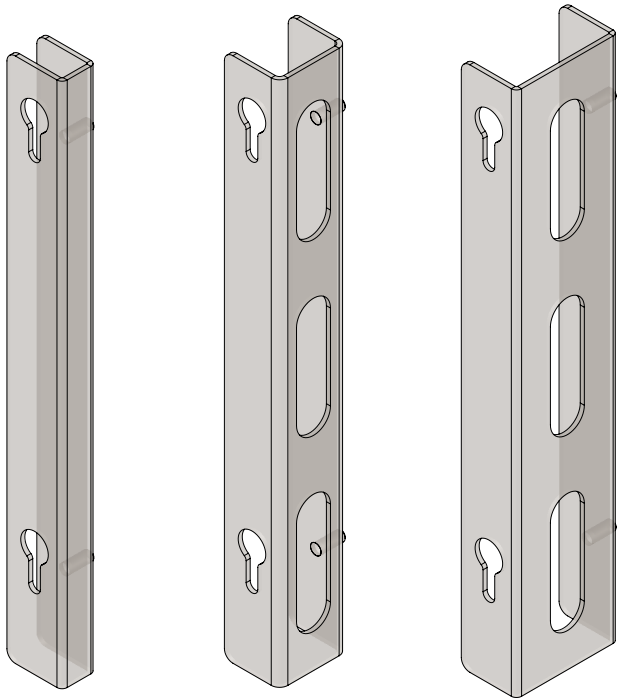

SMALL
(S) 1" SPCR

MEDIUM
(M) 2" SPCR

LARGE
(L) 3" SPCR

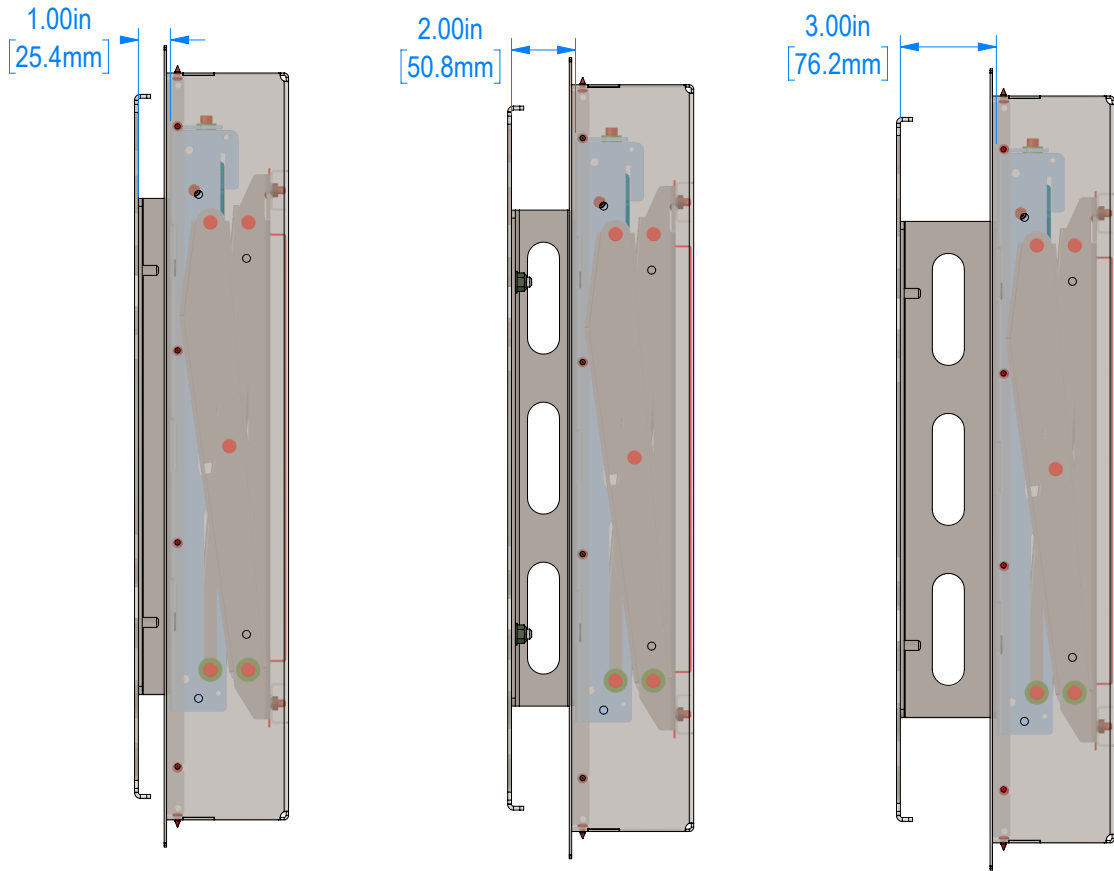

SMALL
(S) 1" SPCR

MEDIUM
(M) 2" SPCR

LARGE
(L) 3" SPCR

NOTE:
TO DISCERN THE LEFT FROM THE
RIGHT SPACER, THE SPACER OPEN
END SHOULD FACE OUTWARD.
LOOK AT DETAIL A & B.

SEE SHEET 4 FOR ASSEMBLY
INSTRUCTIONS.

This drawing contains proprietary information owned or controlled by RPVisual Solutions and must not be used or disclosed without prior written authorization

DIMENSIONS ARE IN INCHES		
TOLERANCES ARE:		
FRACTIONS	DECIMALS	ANGLES
X/X : ± 1/32	XX : ± .03 XXX : ± .010	X : ± .5 XX : ± .20

APPROVED FOR FABRICATION
SIGNATURE:

DATE:

NOTES:
1. FINISH: SEMI-GLOSS BLACK POWDER COAT
2. APPROXIMATE WEIGHT: 2

G	.	.	.
F	.	.	.
E	.	.	.
C	.	.	.
B	.	.	.
A	.	.	.

REV: DESCRIPTION: BY: DATE:

DEALER:

PROJECT:

SKU: RPWM-SPCR-100,200,300

PART NO: S 0039-060-01A M 0039-010-01A L 0039-030-01A


DESCRIPTION: Pair of spacers for Wallmate X-Arms, Small, Medium, Large

SIZE: B	DATE: 07/22/2025	DRAWN: SA	CHECKED: XX
---------	------------------	-----------	-------------


DWG. ID: RPWM-SPCR-100,200,300 SALE DWG.3

JOB NO:	SCALE: 1:1	REVISION:
.	SHEET: 3 OF 4	0


SIDE VIEW OF SPCR-M SHOWN, SAME PROCESS FOR SPCR S AND L

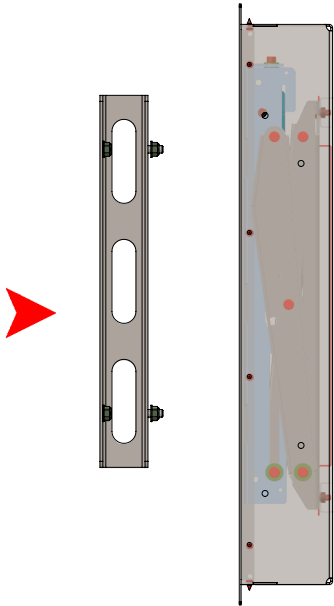

SIDE VIEW OF SPCR-M SHOWN, SAME PROCESS FOR SPCR S AND L

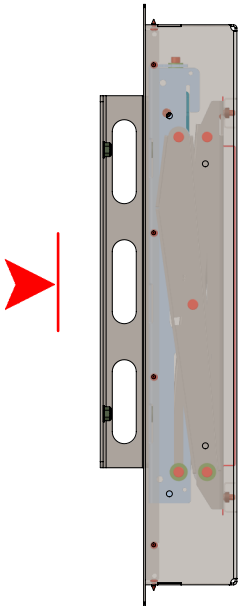

SIDE VIEW OF SPCR-M SHOWN, SAME PROCESS FOR SPCR S AND L

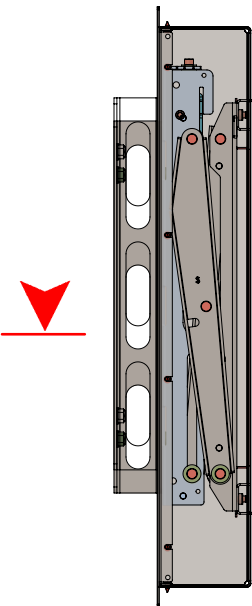

STEP 1
WITH NUTS PARTIALLY THREADED ON THE SPACER, INSERT
IN THE KEY HOLES FLUSH TO THE X-ARM MOUNT SURFACE.



STEP 2
SPACER IS INSERTED IN BOTH KEY HOLES WITH THE OPEN
SIDE OF THE SPACERS FACING OUTWARD.

STEP 3
MOVE DOWN TILL TRAVEL STOPS, THEN, TIGHTEN THE NUTS.

NOTE:

SPACERS MOUNT LIKE ANY TYPICAL X-ARM
SYSTEM.

DROP HANG USING THE KEYHOLES ON THE X-ARM.
(RPWM-SPCR-S/M/L ACTS AS AN EXTENSION OF THE
X-ARMS, MOUNT TO IT AS NORMAL.)

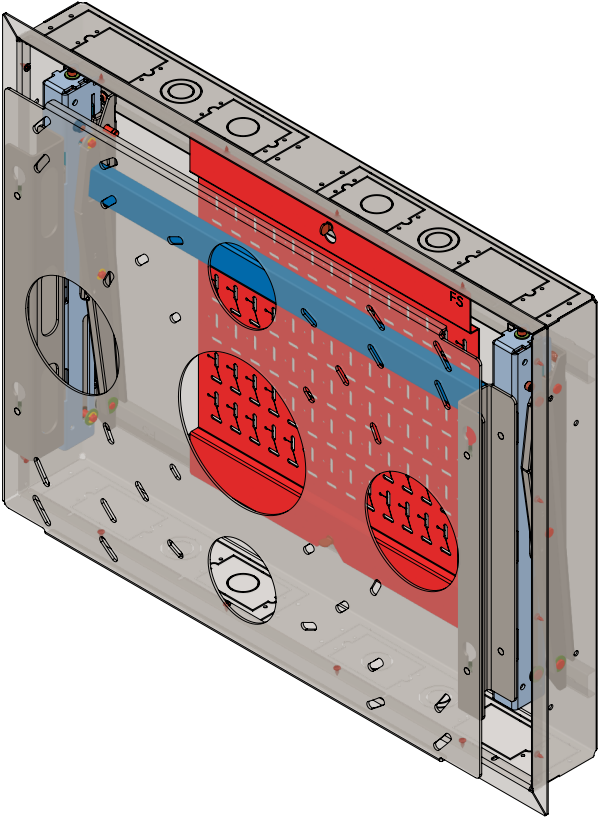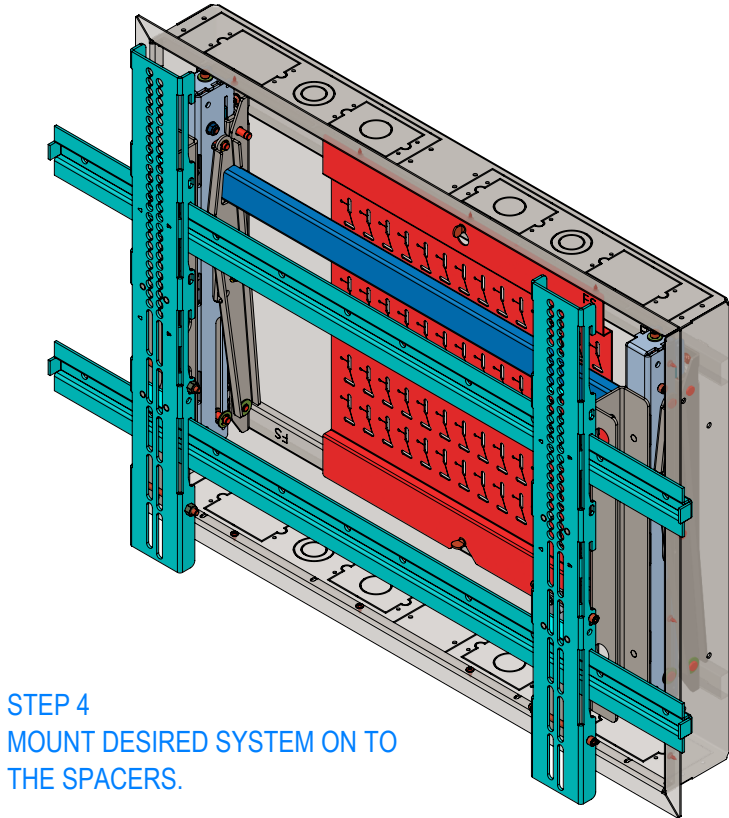

STEP 4
MOUNT DESIRED SYSTEM ON TO
THE SPACERS.

1275 S Lewis St, Anaheim, CA 92805
P: 714-991-6400 | C: 714-390-8572
www.rpvisuals.com

This drawing contains proprietary information owned or controlled by RPVisual Solutions and must not be used or disclosed without prior written authorization

DIMENSIONS ARE IN INCHES		
TOLERANCES ARE:		
FRACTIONS	DECIMALS	ANGLES
X/X : ± 1/32	XX : ± .03 .XXX : ± .010	X : ± .5 .XX : ± .20

APPROVED FOR FABRICATION
SIGNATURE:

DATE:

- NOTES:
- 1. FINISH: SEMI-GLOSS BLACK POWDER COAT
 - 2. APPROXIMATE WEIGHT: 75

G	.	.	.
F	.	.	.
E	.	.	.
C	.	.	.
B	.	.	.
A	.	.	.
REV:	DESCRIPTION:	BY:	DATE:
DEALER:	.	.	.
PROJECT:	.	.	.
SKU:	RPWM-SPCR-100,200,300		
PART NO:	S 0039-060-01A M 0039-010-01A L 0039-030-01A		
DESCRIPTION:	Pair of spacers for Wallmate X-Arms, Small, Medium, Large		
SIZE:	B	DATE:	07/22/2025
DRAWN:	SA	CHECKED:	XX
DWG. ID:	RPWM-SPCR-100,200,300 SALE DWG.4		
JOB NO:	.	SCALE:	1:1
		SHEET:	4 OF 4
		REVISION:	0